

Using SafeTac OCV Test pen.

1. While touching aluminum nib on work piece touch electrode on aluminum button on rear of tester.
2. Indication is as below.
 1. Green LED on (Output is DC and below 35 VDC)
 2. Green LED with Blue LED (Output is AC and below 25 VAC RMS)
 3. RED flashing LED (Output is DC & above 36 VDC)
 4. RED flashing with blue on (Output is AC & above 25 VAC RMS)
 5. Red & Green flashing together (Battery is flat & needs replacement)
 6. No lights battery is flat or voltage being measured is below 3 VDC